 
 


 


 



Components and Hardware List

5mm Allen Wrench  (A) 1 pc.	M5/16" x 1" Allen Head Bolt  (B) 16 pcs.	5/16" Spring Washer  (C) 16 pcs.	5/16" Flat Washer  (D) 16 pcs.
M5/16" x 3/4" Flat Head Bolt  (E) 4 pcs.	Metal Leg  (F) 4 pcs.	Top  (G) 1 pc.	Stretcher  (H) 1 pc.

45219 Round Dining Table




45223 Gathering Height Dining Table

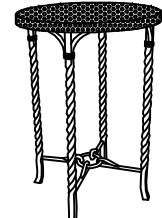

45224 Pub Table

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

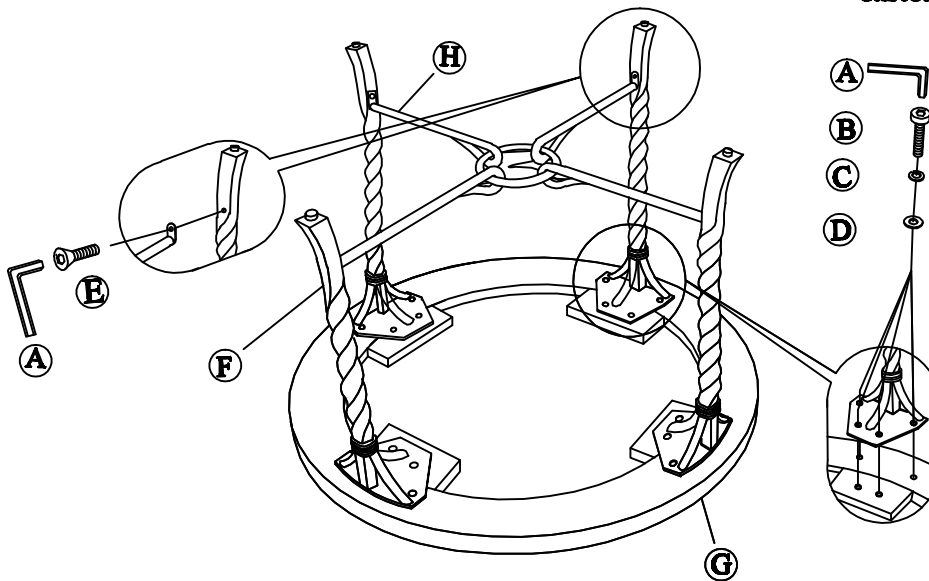

Note:

1. Do not discard any packing materials until the table has been completely assembled, to prevent parts from being accidentally discarded.
2. To prevent possible scratches or damage, assemble the table upside down on a soft surface such as a blanket or carpet.
3. Attach four legs to the Top using 1" Allen-head bolts (B), Spring Washers (C), and Flat Washers (D). Do not fully tighten until after next step.
4. Attach the Center Stretcher to the legs using the 3/4" Flat-head bolts (E).
5. Tighten all bolts using the Allen Wrench (A) provided.
6. Carefully turn the Table upright.