

## ASSEMBLY INSTRUCTIONS

### READ AND SAVE THESE INSTRUCTIONS

**WARNING: WHEN USING FOR OUTDOOR USE, FOLLOW IMPORTANT SAFETY INSTRUCTIONS LISTED AT BOTTOM OF PAGE TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, AND PERSONAL INJURY.**

**TOOLS:** YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: LADDER, SCREWDRIVER, WIRE CUTTER AND DRILL.

**UNPACK THE FIXTURE:** YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: CHAIN, FIXTURE ASSEMBLY, (3) FABRIC SHADE, (3) SHADE FABRICS AND (3) GLASS SHADES. TO PROTECT THE FINISHES, PLACE ALL PARTS ON A SOFT SURFACE.

#### MOUNTING HARDWARE PACKAGE:

PACK A: (2) HOOKS, (2) SCREWS, (2) WOOD SCREWS AND (2) TOGGLE BOLTS. PACK B: CANOPY, CROSSBAR, (4) MOUNTING SCREWS, (2) NUTS, (3) WIRE CONNECTORS, (2) BALL FINIALS.

**NOTE:** THIS LAMP INCLUDES (3) EXTRA OPTIONAL SHADE FABRICS THAT CAN BE USED TO CREATE A SECOND DISTINCTIVE LOOK.

**NOTE: IF USING POWER CORD FOLLOW INSTRUCTIONS BELOW. IF WIRING TO AN OUTLET BOX PROCEED TO OUTLET BOX INSTALLATION INSTRUCTIONS ON NEXT PAGE.**

#### FIXTURE ASSEMBLY

1. THE ARM ASSEMBLIES HAVE BEEN TURNED TO LAY FLAT FOR SHIPPING, CAREFULLY TURN THE ARM ASSEMBLIES SO THAT THEY ARE EVENLY SPACED APART.
2. DETERMINE THE LENGTH OF CHAIN REQUIRED TO HANG THE FIXTURE AT THE DESIRED HEIGHT, REMOVE OR ADD CHAIN AS DESIRED. ATTACH THE QUICK LINK TO ONE END LINK OF CHAIN AND ATTACH THE QUICK LINK TO THE CHAIN LOOP. REMOVE OR ADD CHAIN AS DESIRED AT THIS TIME.
3. POSITION THE FIXTURE AS DESIRED ON CEILING AND MARK POINTS FOR TOGGLE BOLTS OR WOOD SCREWS TO BE INSTALLED.

#### IF INSTALLING IN DRYWALL

- A. DRILL PILOT HOLES ON THE MARKED SPOTS AND INSERT TOGGLE BOLTS (SEE FIG. 2)
- B. REMOVE WOOD SCREWS FROM HOOKS AND SCREW HOOKS TO TOGGLE BOLTS.

#### IF INSTALLING WITH WOOD SCREW TO STUD

- A. POSITION THE FIXTURE AS DESIRED ON CEILING AND MARK POINTS FOR WOOD SCREWS TO BE INSTALLED.
  - B. SCREW THE WOOD SCREWS/HOOKS TO THE CEILING AT MARKED POINTS. (SEE FIG. 1)
4. ATTACH THE CHAIN TO HOOK(S). (SEE FIG. 3)  
(HANG STRAIGHT WITH ONE HOOK OR DRAPE CHAIN USING TWO HOOKS, DO NOT ATTACH THE CORD TO HOOKS).

#### FINAL ASSEMBLY

1. INSTALL A 60 WATT MEDIUM BASE TYPE "FAN/APPLIANCE" BULB (NOT INCLUDED) INTO EACH SOCKET.
2. SCREW A GLASS SHADE TO EACH GLASS SHADE HOLDER, THEN PLACE A FABRIC SHADE OVER EACH GLASS SHADE.
3. PLUG THE POWER CORD INTO AN OUTLET AND TURN ON AT SWITCH.

#### IMPORTANT SAFETY INSTRUCTIONS

1. USE ONLY THREE-WIRE OUTDOOR EXTENSION CORDS THAT HAVE THREE-PRONG GROUNDING PLUGS AND GROUNDING RECEPTACLES THAT ACCEPT THE APPLIANCE'S PLUG.
2. GROUND FAULT CIRCUIT INTERRUPTER (GFCI) PROTECTION IS TO BE PROVIDED ON THE CIRCUIT OR OUTLET TO BE USED FOR THE WET LOCATION PORTABLE LUMINAIRE. RECEPTACLES ARE AVAILABLE HAVING BUILT-IN GFCI PROTECTION AND ARE ABLE TO BE USED FOR THIS MEASURE FOR THIS MEASURE OR SAFETY.
3. USE ONLY WITH AN EXTENSION CORD FOR OUTDOOR USE. SUCH AS AN EXTENSION CORD OF CORD TYPE SW, SW-A, SOW, SOW-A, STW, STW-A, STOW, STOW-A, SJW, SJW-A, SJOW, SJOW-A, SJTW, SJTW-A, OR SJTOW, SJTOW-A.



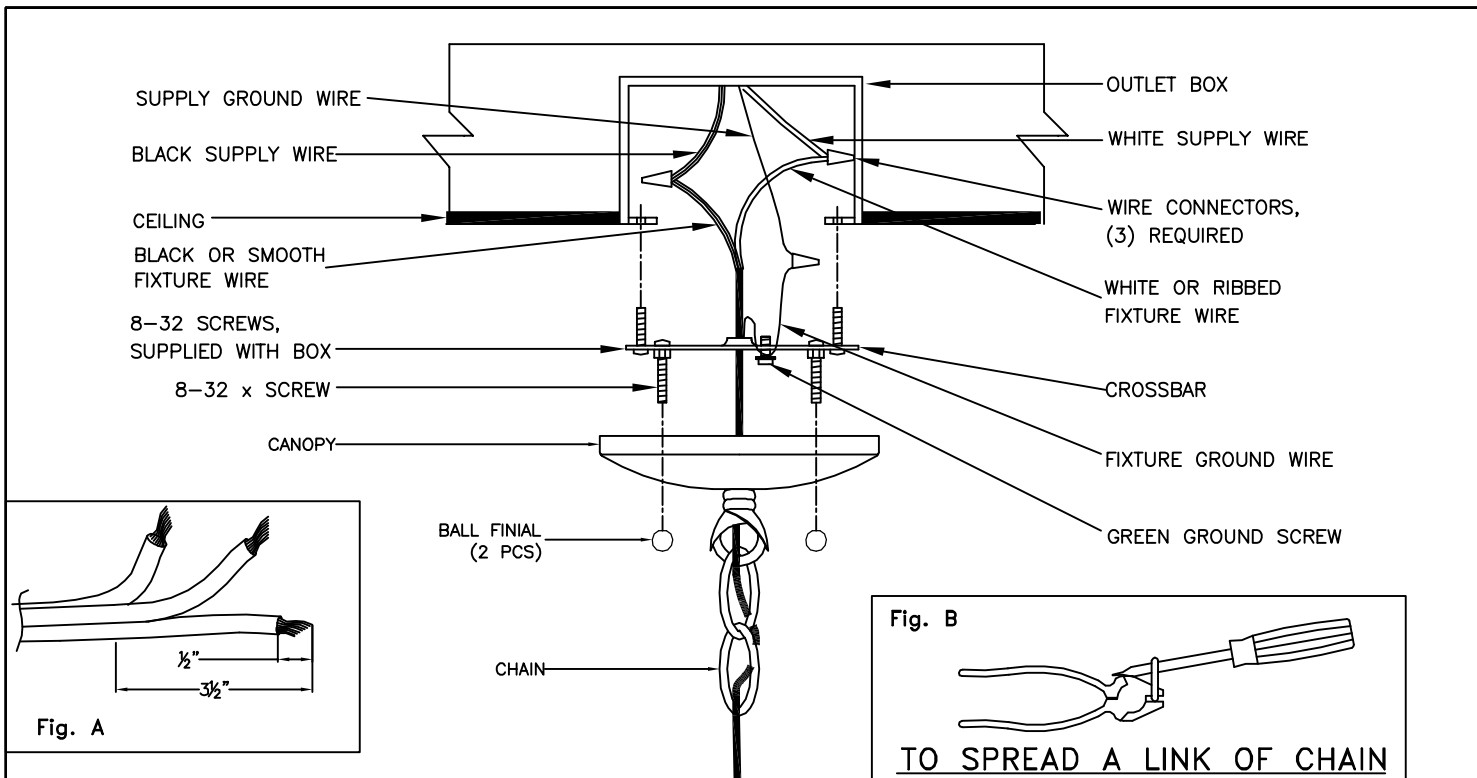


Fig. B

**TO SPREAD A LINK OF CHAIN**  
 USE A PAIR OF PLIERS AND A SCREWDRIVER AS SHOWN ABOVE, BEING CAREFUL TO WRAP THE JAWS OF THE PLIERS WITH CLOTH TO PROTECT THE FINISH OF THE CHAIN.

## INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

### CAUTION

TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRST TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

\* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

\*\* IF YOU ARE NOT FAMILIAR WITH WIRING, YOU SHOULD USE A QUALIFIED ELECTRICIAN.

\*\*\* THIS FIXTURE IS INTENDED TO BE MOUNTED TO A UL LISTED OUTLET BOX CAPABLE OF SUPPORTING THE FIXTURE.

### NOTE: IF WIRING TO OUTLET BOX FOLLOW INSTRUCTIONS BELOW.

#### IF USING POWER CORD, PROCEED TO ASSEMBLY INSTRUCTIONS ON PREVIOUS PAGE.

1. THE ARM ASSEMBLIES HAVE BEEN TURNED TO LAY FLAT FOR SHIPPING, CAREFULLY TURN THE ARM ASSEMBLIES SO THAT THEY ARE EVENLY SPACED APART.
2. DETERMINE THE LENGTH OF CHAIN REQUIRED TO HANG THE FIXTURE AT THE DESIRE HEIGHT, REMOVE OR ADD CHAIN AS DESIRED. ATTACH THE QUICK LINK TO ONE END LINK OF CHAIN AND ATTACH THE QUICK LINK TO THE CHAIN LOOP. REMOVE OR ADD CHAIN AS DESIRED AT THIS TIME. (SEE FIG. B)
3. CUT OFF THE PLUG IN CORD TO KEEP THE POWER WIRE 12" LONGER THAN THE LENGTH THAT YOU WANT. BE SURE TO KEEP THE GROUND WIRE 2" LONGER THAN THE FIXTURE WIRE.
4. SPLIT THE END OF THE POWER SUPPLY WIRE 3-1/2" FROM THE END AND STRIP THE PLASTIC COVER OFF THE WIRE ABOUT 1/2". (SEE FIG. A)
5. SCREW (2) 8-32 SCREWS INTO THE CROSSBAR MAKING SURE THAT THEY LINE UP WITH THE HOLES IN THE CANOPY. ATTACH THE CROSSBAR TO THE CEILING OUTLET BOX USING THE TWO SCREWS PROVIDED WITH THE OUTLET BOX. (NOTE: IF THE SCREWS WITH THE OUTLET BOX ARE TOO SHORT, USE THE (2) 8-32 x 1-1/4" SCREWS PROVIDED IN THE MOUNTING HARDWARE PACKAGE).
6. CONNECT THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTORS PROVIDED. CONNECT THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE IN THE SAME MANNER. INSTALL THE FIXTURE GROUND WIRE UNDER THE GREEN GROUND SCREW ON THE CROSSBAR THEN CONNECT THE FIXTURE GROUND WIRE TO THE SUPPLY GROUND WIRE IN THE OUTLET BOX USING THE TWIST-ON WIRE CONNECTOR PROVIDED.
7. TUCK THE WIRES CAREFULLY INSIDE THE OUTLET BOX. SPREAD THE ELECTRICAL SPLICES SO THAT THE BLACK WIRES ARE ON ONE SIDE OF THE OUTLET BOX AND THE WHITE WIRES ARE ON THE OTHER SIDE.
8. RAISE THE CANOPY TO THE CEILING AND SECURE IN PLACE WITH (2) BALL FINIALS.
9. INSTALL A 60 WATT MEDIUM BASE TYPE "FAN/APPLIANCE" BULB (NOT INCLUDED) INTO EACH SOCKET. (SEE FIG. 3 ON PREVIOUS PAGE)
10. SCREW A GLASS SHADE TO EACH GLASS SHADE HOLDER, THEN PLACE A FABRIC SHADE OVER EACH GLASS SHADE.
11. RESTORE POWER AND TURN ON AT SWITCH, YOUR FIXTURE IS NOW READY TO USE.

