

Taking Your Measurement

After you've taken the measurement as shown below, please see the chart below to determine the appropriate product size.

Arm/ Leg Circumference Measurement



Measure the circumference of the Arm or Leg right above the cast. (If the end of the cast is very close to the elbow, measure mid bicep or measure mid thigh). **(DO NOT MEASURE AROUND THE CAST -- MEASURE AROUND THE SKIN)**

Arm/ Leg Length Measurement



Measure from the tip of middle finger (or the bottom of the heel) to top end of cast. **It is OK if the cast protector measurement is longer than the limb measurement**, the protector will still work. Extra length will be removed when the vacuum seal is created.

Size Chart Arm Cover

Arm Cast Cover	Model #	Arm Circumference	Length
X-Small Full Arm	FA-12	6 - 6.75 inches	16 inches
Small Full Arm	FA-14	6.75 - 8.75 inches	23 inches
Medium Full Arm	FA-16	8.75 - 10 inches	28 inches
Large Full Arm	FA-18	10 inches & up	31.5 inches
Small Half Arm	HA-13	7.75 - 10 inches	17.5 inches
Large Half Arm	HA-15	10 inches & up	20 inches

Size Chart Leg Cover

Leg Cast Cover	Model #	Leg Circumference	Length
X-Small Full Leg	FL-12	7.5 - 11 inches	19 inches
Small Full Leg	FL-14	14 - 16.5 inches	29 inches
Medium Full Leg	FL-16	16.5 - 21 inches	33 inches
Large Full Leg	FL-18	21 inches & up	37 inches
Small Half Leg	HL-13	10 - 13 inches	21 inches
Large Half Leg	HL-15	13 inches & up	23.5 inches