


**LYTECASTER REFLECTOR TRIMS 1100HID & 1000HID SERIES**

**READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE**

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

**Retain these instructions for maintenance reference.**

**NOTE: Use this Instruction Sheet only when Lytecaster Trim is being installed in the 1101HIDP & 1001HIDP series Frame-In Kits. If not, disregard this Instruction Sheet. It is recommended you maintain a copy of the following instructions for reference.**

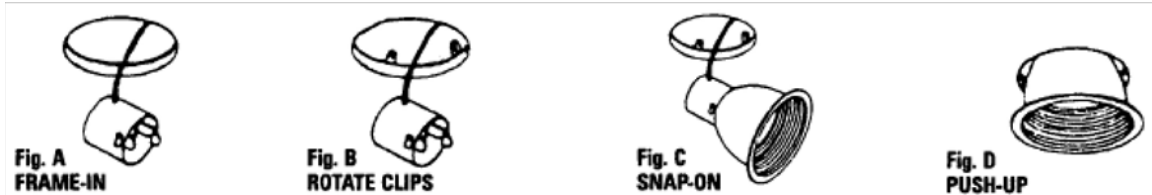


**WARNING: BEFORE INSTALLING REFLECTOR TO FRAME-IN KIT, READ MARKINGS IN REFLECTOR TRIM AND IN SOCKET CUP OF FRAME-IN KIT TO DETERMINE LAMP WATTAGE AND TYPE APPLICABLE FOR YOUR INSTALLATION. IF I.C. TYPE FRAME-IN KIT IS USED, IT MAY BE INSTALLED IN DIRECT CONTACT WITH INSULATED CEILING. IF A NON-I.C. TYPE FRAME-IN KIT IS USED, DO NOT INSTALL INSULATION WITHIN 3 INCHES OF FIXTURE SIDES OR WIRING COMPARTMENT, NOR ABOVE FIXTURE IN SUCH A MANNER TO ENTRAP HEAT. FOR I.C. TYPE INSTALLATION ONLY; ASSEMBLE SOCKET CUP IN UPPER SLOT POSITION FOR REFLECTOR TRIMS WITH DUAL SLOT POSITIONS.**

**WARNING: USE ONLY REFLECTOR TRIMS PROVIDED BY LIGHTOLIER INC. USE OF OTHER MANUFACTURERS' REFLECTOR TRIMS VOIDS THE UNDERWRITERS LABORATORIES LISTING AND COULD CONSTITUTE A FIRE HAZARD.**

**NOTE:**  
 INSTALL 1000HID SERIES TRIMS IN 1001HIDP SERIES FRAME-IN KITS.  
 INSTALL 1100HID SERIES TRIMS IN 1101HIDP SERIES FRAME-IN KITS.

- 1. FRAME- IN (Fig. A)**  
 See Frame-In Kit Instruction sheet for installation procedure.
- 2. ROTATE TRIM-CLIPS (Fig. E)** Rotate TRIM-CLIPS so that they extend inwardly toward the center opening.
- 3. SNAP-ON (Fig. C)**  
 Insert SOCKET CUP in neck of REFLECTOR making sure SPRINGS of SOCKET CUP snap into SLOTS of REFLECTOR. There are upper and lower slots in the REFLECTOR.
- 4. PUSH-UP (Fig. D)**  
 Push REFLECTOR TRIM straight up until it is tight against ceiling.  
 Note: To remove REFLECTOR TRIM turn REFLECTOR TRIM counterclockwise while pulling downward.

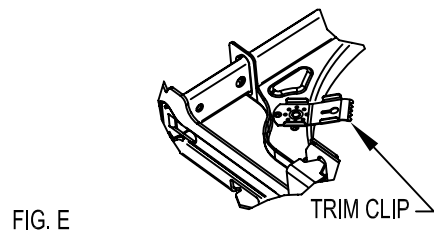

**\* RECESSED ADJUSTABLE 1127HID, 1148HID SERIES TRIMS FIG. F & 1027HID, 1048HID SERIES TRIMS**

1. Screw SOCKET EXTENSION (male adaptor) into SOCKET.
2. After pushing REFLECTOR TRIM tight against ceiling, lamp the fixture.
3. To adjust the angle at which the light leaves the fixture, first tilt the INNER YOKE to the desired angle. (**NOTE:** The YOKE tilts in only one direction.) Then rotate the OUTER YOKE to the desired direction. (**NOTE:** The fixture has a 360° rotational stop. DO NOT attempt to override the safety feature.

