



SLAT KIT M&T

ATLANTIC
FURNITURE


ASSEMBLY INSTRUCTION

(TWIN 65600)

Before assembling your Bed slat kit, please read through these instructions carefully, familiarising yourself with the different parts.
Please note that you will require a Phillips Head Screwdriver.

PARTS LIST

01 SLAT KIT 1 SET

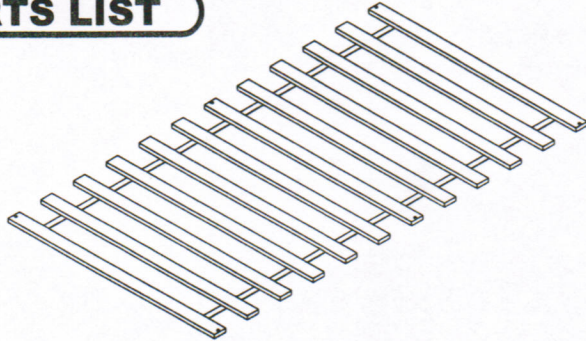

A



1 1/4" Wood Screw - 6 pcs
For Slat Kit to Ledger Strip


HARDWARE

Step 1

Assemble bed frame according to bed assembly instructions.

Step 2

Lay the slat kit onto the bed.

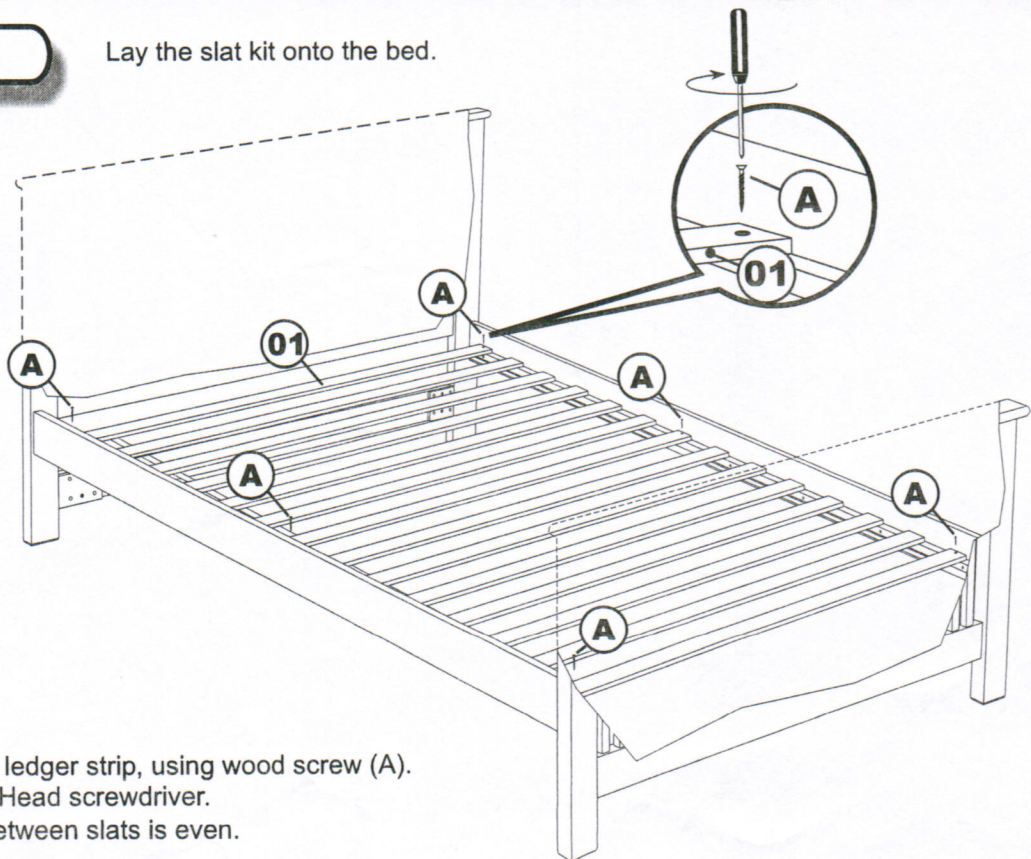

Screw slat kit (01) to ledger strip, using wood screw (A).
Tighten with Phillips Head screwdriver.
Be sure the space between slats is even.