
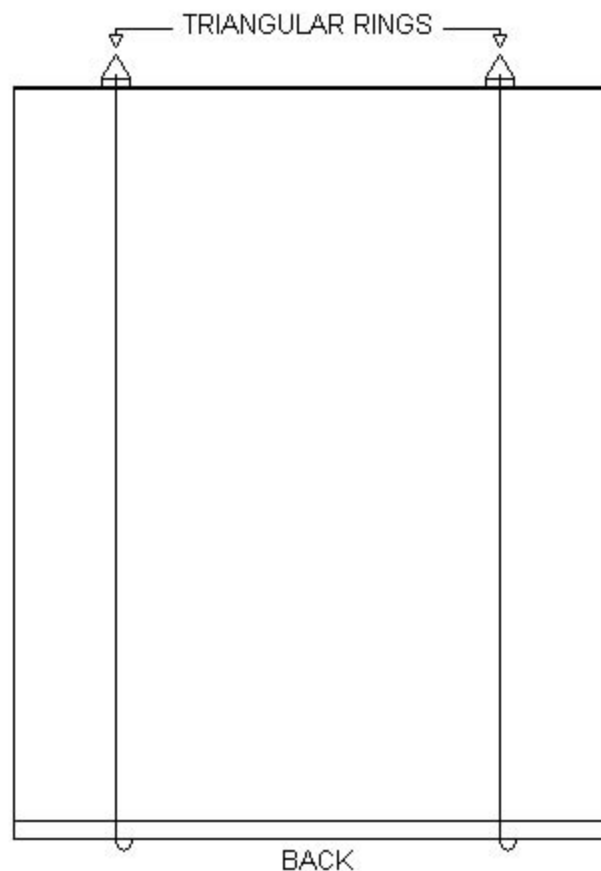


ROLL-UP BLIND RESTRING GUIDE

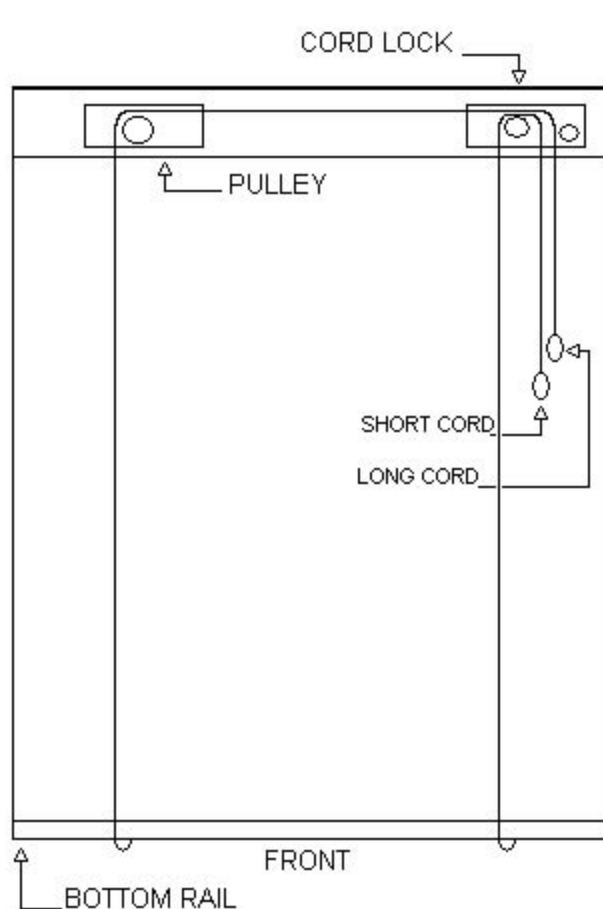

1. Differentiate the long cord from the short.
2. Start at the cord lock located on the right.
3. Follow the diagram for cording.
4. With cord currently being used, go down the length of the blind, under the bottom rail, and up the back of the blind to the top of the headrail.
5. Tie the cord in a double knot to the triangular ring.
6. With your last cord repeat steps 2 - 5.