



# ROMAN SHADE RESTRING GUIDE

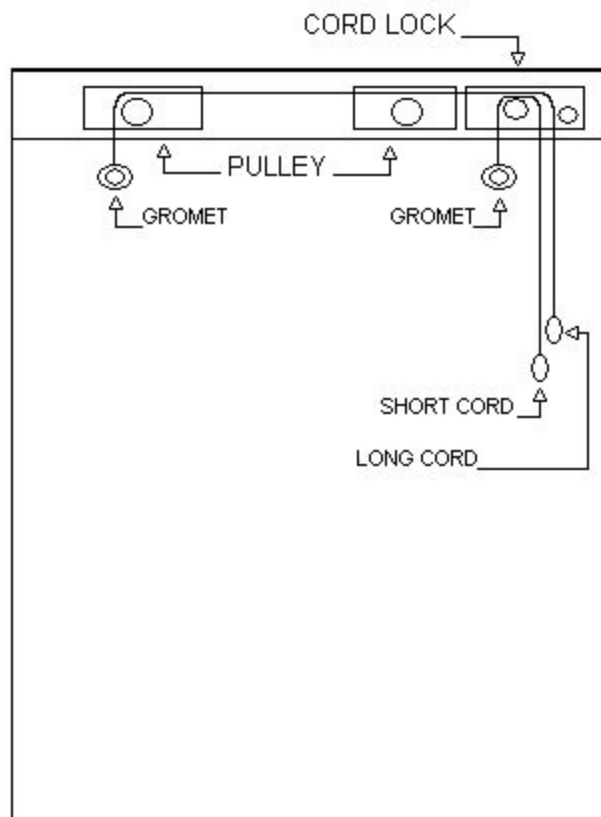

FRONT

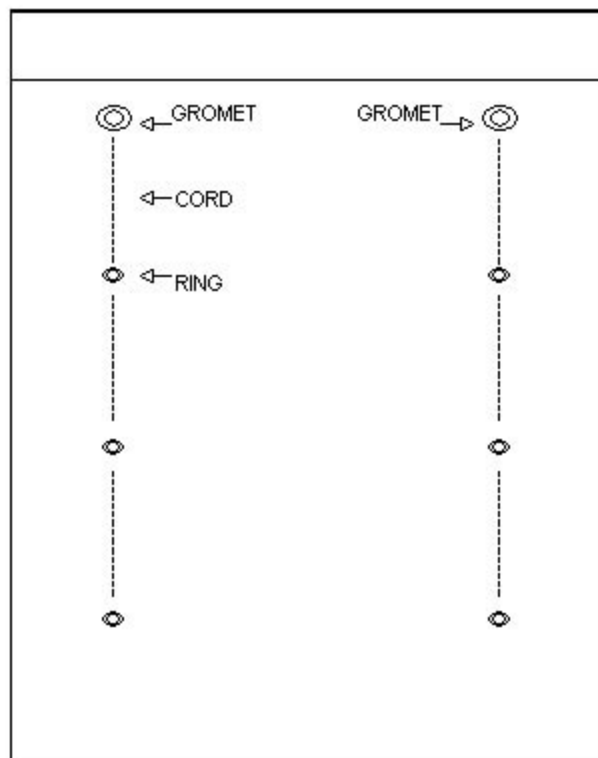

BACK

1. Differentiate the long cord from the short.
2. Start at the cord lock located on the right.
3. Follow the diagram for cording.
4. With cord currently being used, place cord through the GROMET.
5. The cord is now at the back of the blind. Turn blind over and run cord down through all rings.
6. Tie cord in a double knot to the bottom ring.
7. With your last cord repeat steps 2 - 6.